
SycoTec Suction motor 2.001.8560

Assembly Instructions

ΕN

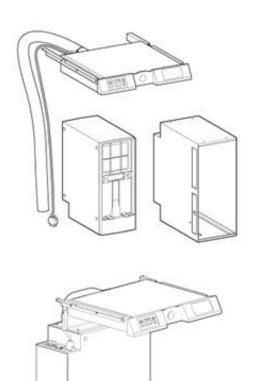







All the trademarks mentioned in these instructions for use are the property of their respective owners.

All the technical data, information and properties of the product described in these instructions for use were correct at the time of printing.

The product may be modified or improved as a result of technical developments.

This does not give entitlement to have already existing products upgraded.

Manufacturer:



Phone: +49 7561 86-0 Email: info@sycotec.eu Website: www.sycotec.eu



Contents


1	User information	4
	1.1 Target group of the document	4
	1.2 Applied symbols	4
2		4
	2.1 Warning signs	4
	2.2 Safety instructions	4
3	Suction motor 2.001.8560	5
	Replacing suction motor	5
	4.1 Removing the fan	6
	4.2 Installing the fan	9
5	Commissioning	12

1 User information

1.1 Target group of the document

This dokument is for service technicians.

1.2 Applied symbols

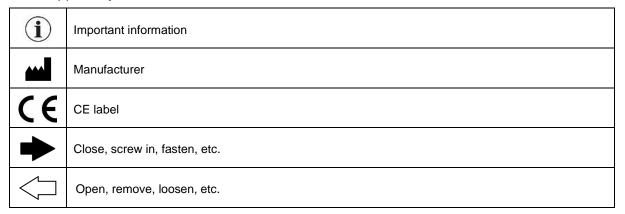

2 Safety

2.1 Warning signs

Structure of warning signs

HAZARD SYMBOL Nature or source of hazard

Description of the nature or source of hazard and its possible consequences.

Measures to avoid the hazard

Risk levels

AWARNING Warning

Indicates a hazardous situation that could lead to serious or fatal injuries.

ACAUTION Caution

Indicates a hazardous situation that could lead to minor or moderate injuries.

ATTENTION Attention

Indicates a hazardous situation that could lead to property damage.

2.2 Safety instructions



These Assembly Instructions are only valid in conjunction with the corresponding operating instructions and in compliance with all safety instructions.

AWARNING Electrical power

Death or injury from electric shock.

- Before servicing, pull the mains plug out of the socket or completely disconnect the device from the power to deenergise it.
- ▶ After conversion, the electrotechnical safety must be checked in accordance with IEC 62638 (VDE 0701 / 0702).


ACAUTION Improper maintenance or repair of the unit

Damage to and malfunction of the unit

- ▶ Repair and servicing work on the electronic part of the unit may be done only by skilled staff or technicians.
- Use original spare parts only.

3 Suction motor 2.001.8560


- SycoVac mono / SycoVac mono Typ: plus
- SycoVac mono Type: mobile / SycoVac mono Type: mobile plus

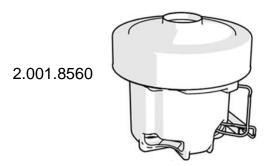


4 Replacing suction motor




Before installing a new suction motor, check whether the correct air baffle is present!

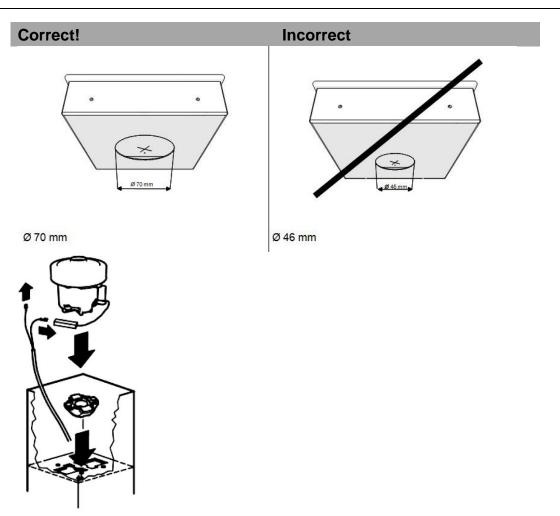


4.1 Removing the fan

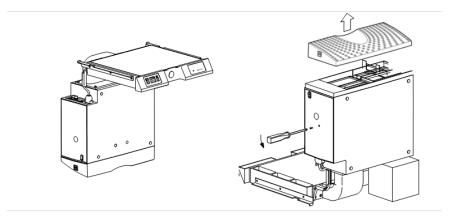

SycoVac mono / SycoVac mono Typ: plus

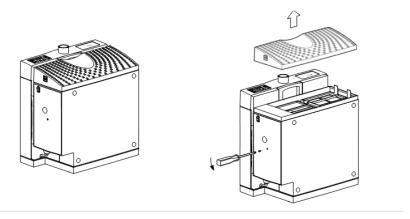

SycoVac mono Typ: mobile / SycoVac mono Typ: mobile plus

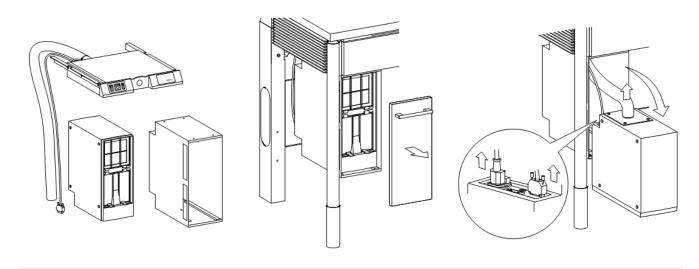

SMARTair FLEXspace / SMARTair Evo FLEXspace


Death or injury from electric shock.

- ▶ Before servicing, pull the mains plug out of the socket or completely disconnect the device from the power to deenergise it.
- ▶ After conversion, the electrotechnical safety must be checked in accordance with IEC 62638 (VDE 0701 / 0702).




Connector A is only present on SycoVac mono type: plus.


4.1.1

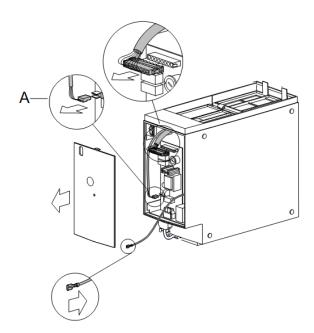


4.1.2

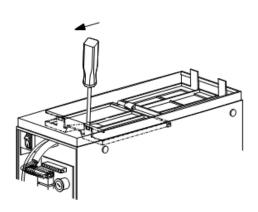


4.1.3

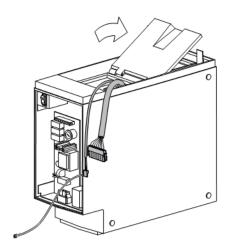


4.1.4

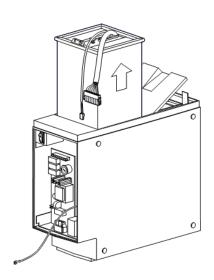

4.1.5

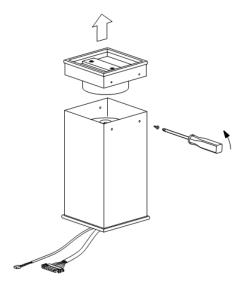


4.1.6

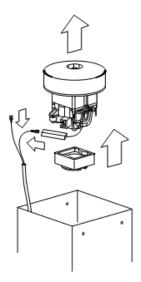


4.2 Installing the fan


4.2.1

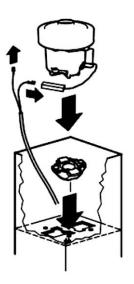

 
4.2.2




4.2.3

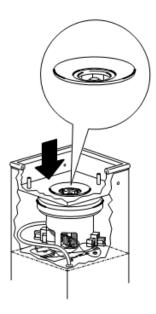


4.2.4

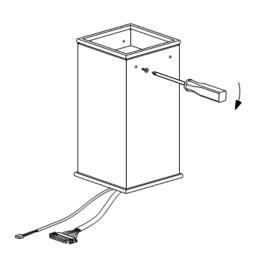

4.2.5

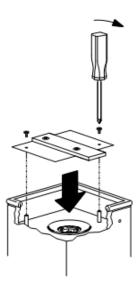


4.2.6

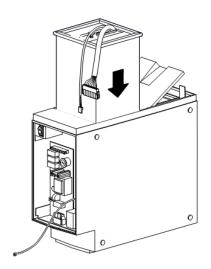


(i)

Connector A is only present on SycoVac mono type: plus.

4.2.7

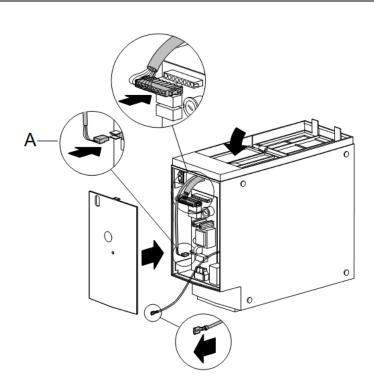

4.2.8

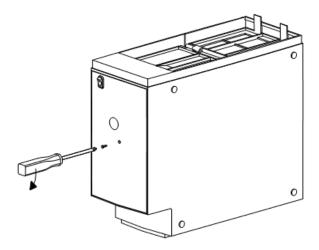

5 Commissioning

► Perform general functional tests.



Perform electrical safety checks according to IEC 62638 (VDE 0701 / 0702).



The safety check must be performed after the kit has been assembled. See Instructions for Use.

ATTENTION

Refer to the respective Instructions for Use for information on operating the units.